


Document Scanner DR-3080CII

Easy Start Guide


Thank you for purchasing the Canon DR-3080CII Document Scanner. This Easy Start Guide describes the procedure for setting up the scanner for use. Follow the procedures outlined in this Easy Start Guide to set up the scanner. Details on using the scanner are described in the User's Guide packaged with the scanner. Before you start using the scanner, make sure to thoroughly read the User's Guide.

STEP 1 Checking the Package Contents


When you unpack your scanner, make sure all of the following accessories are included. If any of the items listed below are missing or damaged, contact your local authorized Canon dealer or service representative.

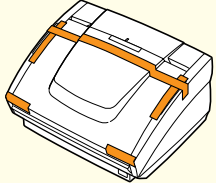


DR-3080CII Scanner

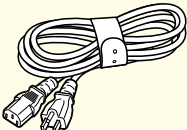


Power Cord

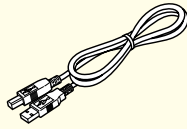


USB Cable

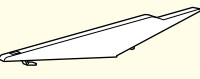


Document Eject Guide

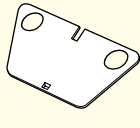


Auxiliary Paper Support Plate




Easy Start Guide (This Manual)



User's Guide

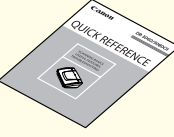


Quick Reference Guide

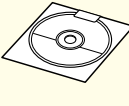


DR-3080CII Setup Disc


The DR-3080CII Setup Disc is inserted in the User's Guide.




Adobe Acrobat Setup Disc



Warranty Card (U.S.A and Canada only)



Registration Card (U.S.A and Canada only)

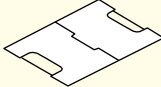

Shading Sheet


- Note**
- The DR-3080CII Setup Disc contains the Softwares (DR-3080CII Scanner Driver and CapturePerfect3.0) and PDF manuals. For details, refer to “About the Setup Disc” on page 16 of the User's Guide.
 - Items included in this package are subject to change without notice.
 - Keep the package and packing materials for storing or transporting the scanner.

After checking the package contents, you need to remove all the packing materials protecting the scanner. (STEP2)


STEP 2 Removing the Packing Materials

After unpacking the scanner, perform the following steps to remove all the orange tape and protective materials from it.

1. Peel off all the orange tape from the outer casing.

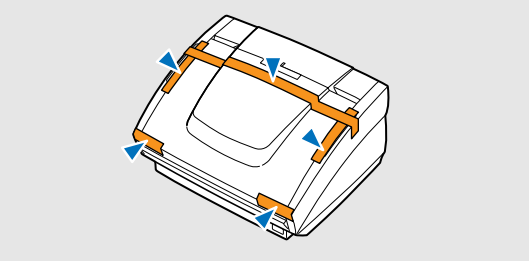


2. Carefully open the document feed tray.

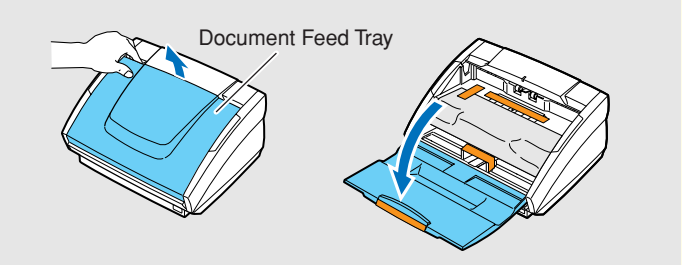


■ Trademarks

- Canon and the Canon logo are registered trademarks of Canon Inc. in the United States and may also be trademarks or registered trademarks in other countries.
- Microsoft Windows® is a registered trademark of Microsoft USA in the United States and other countries.
- Other brands and product names used in this manual may be trademarks or registered trademarks of their respective companies.


3. Peel off the orange tape from all the places marked ▼ below.

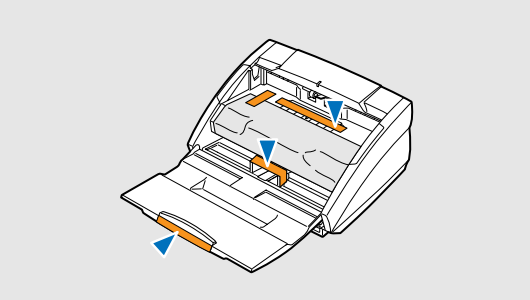


4. Peel off the orange tape indicated by the ▼ mark, and carefully open the upper unit.

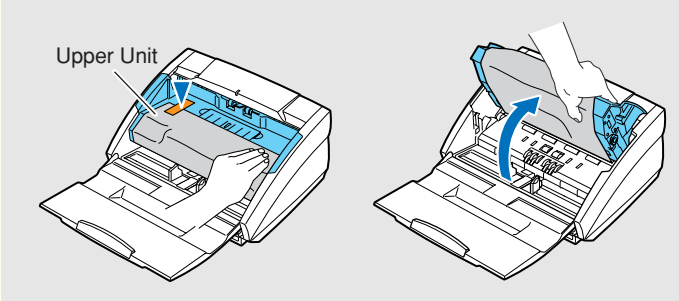

5. Remove the protective sheet.

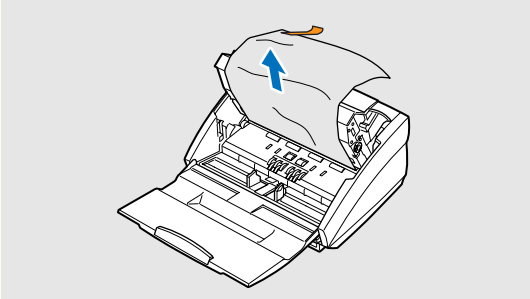

6. Gently close the upper unit. Make sure the upper unit is closed securely by pressing down on it until you hear it click into place.

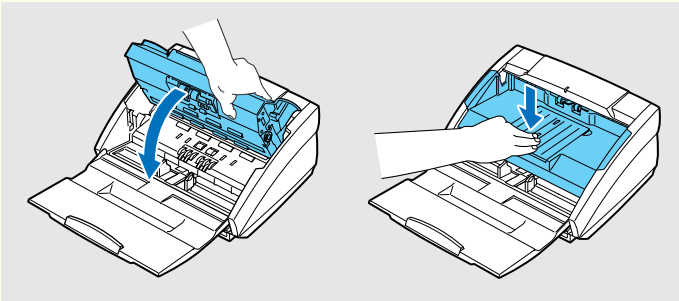


The scanner is now ready for use.
Next, you need to install the scanner software. (STEP3)

STEP 3 Installing the Software

Install the software before connecting the scanner to the computer.

Warning

- ❑ Do not connect the scanner to the computer before installing the software. In a Windows 98SE/Me/2000/XP environment, if you connect the scanner and turn it ON before you install the software, a wizard screen will appear. If this wizard appears, click [Cancel] to exit the wizard, and then turn the scanner OFF.
- ❑ Close all other applications before installing the software.

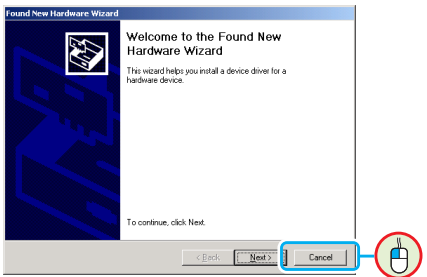


Wizard Screen (Windows 2000)

1. Log on to Windows.

Be sure to log on with Administrator privileges when logging on to Windows NT/2000/XP.


2. Insert the DR-3080CII Setup Disc into the computer's CD-ROM drive.

The setup wizard automatically starts up when you insert the CD-ROM into the CD-ROM drive. If the setup wizard does not start up, run the setup.exe application on the CD-ROM.

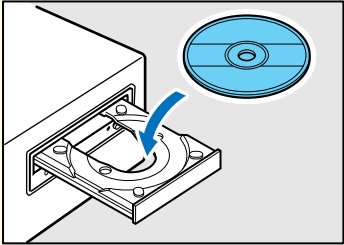


3. Click [Typical Installation].

[Typical Installation] installs all of the software. If you want to select which parts of the software to install, click [Custom Installation].

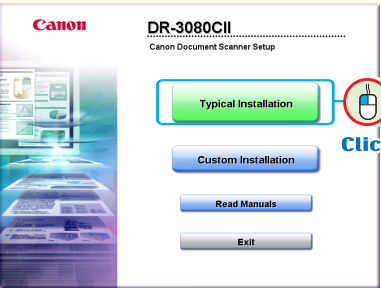


4. Click [Install].

All of the currently displayed software is installed. To install only selected software, click [Back] and select [Custom Installation].

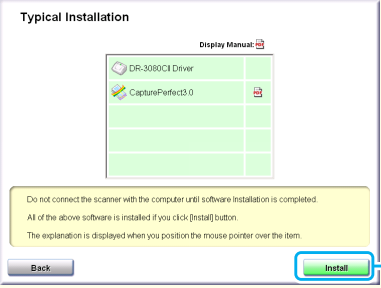

5. Click [Next].

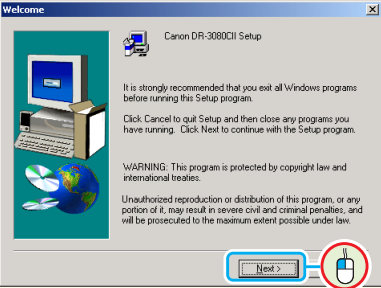

6. Read the software license agreement, and click [Yes] if you consent to its conditions.

Installation of the scanner driver starts.




7. Click [Finish] to complete the installation.


Next, the installation wizard for CapturePerfect 3.0 appears.



8. Click [Next].

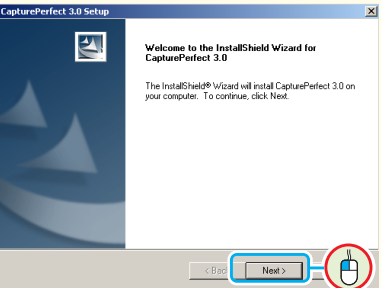


9. Read the software license agreement, and click [Yes] if you consent to its conditions.

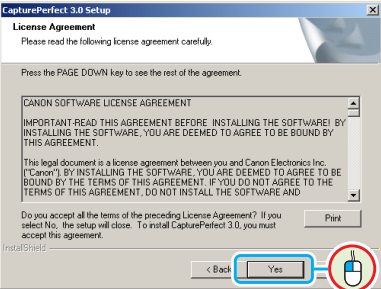


10. Check the destination folder for the installation, and click [Next].

Installation of CapturePerfect 3.0 starts.

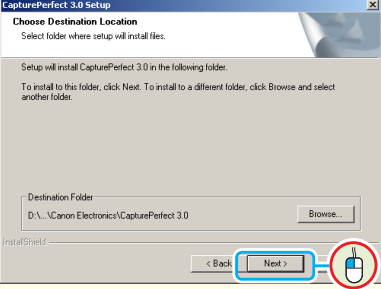


11. Click [Finish] to complete the installation of CapturePerfect 3.0.

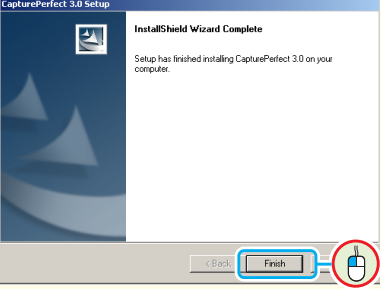

12. When all installations are complete, the installation completed screen appears.


Click [Exit] to exit the installer. Click [Back] to return to the menu screen.

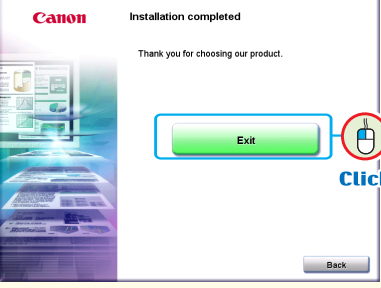

This completes the software installation.
Next, you need to connect the scanner to your computer. (STEP4)

STEP 4 Connecting the Scanner to Your PC

The scanner can be connected to a computer in two ways: by USB connection to a standard USB port on the computer, or by SCSI connection to a SCSI card installed in one of the computer's expansion slots. Select a connection method appropriate to your computing environment.

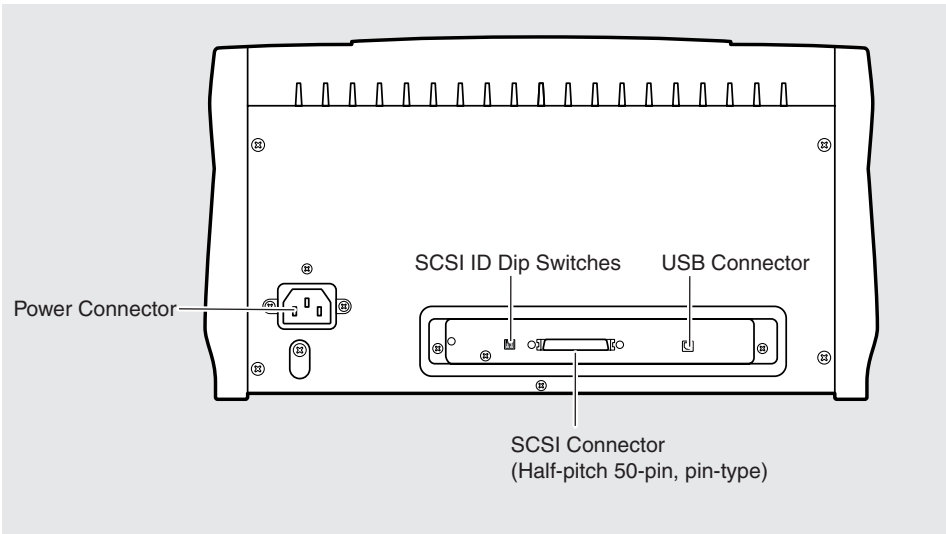

Warning

- Windows NT does not support the USB interface. Use a SCSI connection with Windows NT.
- Do not use both a USB connection and a SCSI connection at the same time.
- Use only the supplied power cord.
- Connect the scanner to your computer while the scanner is turned OFF.
- Before connecting the scanner with a SCSI cable, turn your computer OFF.
- A SCSI cable is not supplied. Acquire a SCSI cable beforehand that matches the shape of the connectors on your SCSI card and the scanner.

Warning

- When using the scanner in a daisy chain connection with other SCSI devices, pay attention to the following points:
 - The default setting for the SCSI ID is "SCSI ID=2." Set the dip switches so that the scanner's SCSI ID is different from all other SCSI devices on the chain.

Dip Switches

1 2

Default Position (SCSI ID=2)

SCSI ID	SW1	SW2
2	OFF	OFF
3	ON	OFF
4	OFF	ON
5	ON	ON

ON OFF

1 2

ON OFF

ON OFF

ON OFF

- The scanner has a built-in SCSI terminator that is permanently set to [ON]. When using the scanner in a daisy chain connection, make sure that it is connected as the terminating device and that the terminators of all other SCSI devices in the chain have been set to [OFF].

The scanner is now connected to your computer.
Next, you need to turn on the scanner and ensure Windows recognizes it. (STEP5)

STEP 5 Turning On the Power (Scanner Recognition)

When you turn on the DR-3080CII in a Windows 98SE/Me/2000/XP environment, Windows uses the Plug and Play feature to recognize the scanner and automatically installs the necessary driver. (Windows NT does not have a scanner recognition feature.)

Warning

- When the scanner is connected by a SCSI cable, always turn on the scanner before the computer. Turning on the computer first may prevent it from recognizing the scanner properly.
- Be sure to log on with Administrator privileges when logging on to Windows NT/2000/XP.
- Wait at least 10 seconds before turning the scanner on again after turning it off.
- If the scanner will not be used for an extended period, be sure to unplug it from the power outlet for safety.

1. Check the connection between the scanner and the computer.

2. Press the power switch to turn the scanner ON (when connecting by SCSI).
The power indicator and start key indicator both light green.

3. Turn ON your computer.

Power indicator

Power Switch

On Position

4. Windows recognizes the DR-3080CII as new hardware and performs installation automatically.

Found New Hardware

CANON DR-3080CII USB

Installing...

(Windows98/Me/2000)

Found New Hardware

CANON DR-3080CII USB

1:05 PM

(WindowsXP)

Note

- For Windows XP, a balloon help pop-up appears when installation is finished.

Found New Hardware

Your new hardware is installed and ready to use.

1:36 PM

- The installation finished message does not appear in Windows 98SE/Me/2000.
- The scanner is registered on the computer as "CANON DR-3080CII USB" (or "CANON DR-3080CII SCSI") in the "Imaging Device" directory of the Device Manager.

Device Manager

Computer

Disk drives

Display adapters

IDE/ATAPI controllers

Imaging devices

Keyboards

Mouse and other pointing devices

Monitors

Network adapters

Other devices

Ports (COM & LPT)

SCSI and RAID controllers

System devices

Universal Serial Bus controllers

- When you restart your computer, the scan panel icon remains resident in the task tray. For details, refer to "About the scan panel" on page 35 of the User's Guide.

Scan Panel

17:52

The scanner is now correctly recognized by your computer.
Next, you need to select the scanner with the scanning software. (STEP6)

STEP 6 Selecting the Scanner

You must select your scanner before using it with an ISIS- or TWAIN-compatible scanning application. The menus and procedures for selecting the scanner are different for each application. For details, refer to the manual for your scanning application when selecting the scanner. This section explains the procedure for selecting the scanner with "CapturePerfect 3.0". For details on how to use CapturePerfect 3.0, refer to the "CapturePerfect 3.0 Operation Guide" in the Programs menu of Windows.

1. Launch CapturePerfect 3.0 from the Programs menu in Windows.

Windows Update

Programs

Accessories

Startup

Internet Explorer

Outlook Express

CANON DR-3080CII

CapturePerfect 3.0

Click

2. Select [Select Scanner] from the Scan menu.

Scan

File

View

Page

Options

Help

Click

3. Select [Canon DR-3080CII] and click [OK].

Select Scanner

Scanner Name:

Canon DR-3080CII

OK

Cancel

Settings...

Click

The setup is now complete

This completes the setup of the DR-3080CII. Details on how to use the DR-3080CII are described in the User's Guide packaged with the scanner. Before you start using the scanner, make sure to thoroughly read the User's Guide.